SPECIFICATION SHEET

JFW MODEL 50PA-613

PROGRAMMABLE ATTENUATOR ASSEMBLY

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Frequency Range 700-6000 MHz

Configuration 10 x 2 Handover Test System

(see block diagram 092-6764 for attenuator addressing)

(all ports are bi-directional)

(full fan-out i.e. every path has its own attenuator)

(the ADMIN password is located on rear panel)

Enclosure Type 19 inch rack mount @ 4RU high

Impedance 50 Ohms nominal

Attenuation Range 0-95 dB in 1 dB steps

Startup/Default States Attenuators to 95dB at startup (see ATTEN command)

(configurable)

DHCP enabled (see NET command)

4 Ethernet users (see NET command)

Prompts off (see PROMPT command)

All of these default settings can be changed by user. Unit can be configured for up to 12 Ethernet users.

VSWR 1.8:1 maximum

< 1.6:1 typical

Insertion Loss 35 dB maximum 33 dB typical

Power Divider Isolation 20 dB minimum 23 dB typical

Attenuation Accuracy \pm 0.50 dB 1-3 dB

 \pm 0.75 dB 4-7 dB \pm 1.00 dB 8-11 dB \pm 1.25 dB or 4% 12-95 dB (whichever is greater) (guaranteed monotonic)

RF Input Power +20 dBm average

Switching Speed 1 microsecond typical

(after command is received and processed)
(3 milliseconds typical processing time)

Manual Control 20-Button Keypad and LCD display

(IP Address configurable via keypad) (Net mask configurable via keypad) (Gateway configurable via keypad) (Baud rate configurable via keypad)

Remote Control Ethernet (DHCP, TCP/IP, 10/100, up to 12 users)

RS-232 (up to 115200 Baud)

--CONTINUED--

Page 1 of 2 JFW FORM E-7-F REV F

SPECIFICATION SHEET

JFW MODEL 50PA-613

PROGRAMMABLE ATTENUATOR ASSEMBLY

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Remote Commands Attenuator Control Commands:

Atten, Set Path, Read Path, Read All Paths, Set Attenuator, Read Attenuator, Set All Attenuators, Read All Attenuators, Read All Extended, Fade Attenuator, Variable Attenuator Handover, Block, Set Block, Read Block, Read All Blocks, Fade Block, Variable Block Handover

System Commands:

Help, Identification, Store, Recall, Pause, Net, Serial, Close, Disconnect, MOTD, Date, Message, Restrict, IDENT, Name, Show Users, Reboot, Uptime, Prompt

RF Connector N female

AC Supply 100-240 VAC @ 47-63 Hz

2 Amp 5x20mm "Slo-Blo" AC fuse Littelfuse #215-002, JFW #025-021

Temperature Range Operating: 0°C to +70°C Storage: -55°C to +85°C

Physical Size See outline drawing 092-6763

ECR/ECN	# DATE	REV	APPR / DATE	ECR/ECN # DA	ATE	REV	APPR / DATE
	11/10/2010		CLK 11/10/2010				
24239	09/09/2014	A	TRS 09/09/2014				
26652	05/12/2016	В	TRS 05/12/2016				

Page 2 of 2 JFW FORM E-7-F REV F