# Xtra Long Life 100 million cycles

# **USB/Ethernet RF Switch Matrix** RC-1SPDT-A18

 $50\Omega$  DC to 18 GHz

# The Big Deal

- USB or Ethernet-TCP/IP (HTTP and Telnet protocols) control
- Capable of 100 million cycles
- SPDT electromechanical, absorptive RF switch (85 dB typ. isolation)
- Plug-and-Play usable with Windows<sup>®</sup>, Mac<sup>®</sup>, and Linux<sup>®</sup> computers





Case Style: LM1848

Installation CD



# **Product Overview**

Mini-Circuits' RC-1SPDT-A18 is a general purpose RF switch matrix controlled via either USB or Ethernet-TCP/IP (supports HTTP and Telnet protocols). The model contains an electromechanical SPDT, absorptive fail-safe RF switch constructed in break-before-make configuration and powered by +24VDC with switching time of 25 ms typical. The RF switch can be operated remotely using the supplied GUI software or programmed by the user with the included API objects. The RF switch operates over a wide frequency band from DC to 18 GHz, has low insertion loss (0.2 dB typical) and high isolation (85 dB typical) making the switch matrix perfectly suitable for a wide variety of RF applications.

The RC-1SPDT-A18 is constructed in a compact, rugged metal case (4.5" x 6.0" x 2.25") with 3 SMA(F) connectors (COM, 1, and 2), a 2.1mm DC socket, USB type B port, and a standard RJ45 network socket. The model is supplied with our easy-to-install, easy-to-use GUI software and API objects for Windows environments with complete programming instructions for 32 and 64 bit Windows<sup>®</sup> and Linux<sup>®</sup> operating systems. Also included is a 2.7 ft. USB cable, a 5 ft. Ethernet cable for Ethernet (HTTP and Telnet) control, and a power adaptor suitable for US, EU, and other power systems. See page 8 for list of all accessories included. Longer USB cables and a mounting bracket are available as additional accessories.

# **Key Features**

Feature	Advantages
Ethernet-TCP/IP- HTTP and Telnet Protocols (Supports DHCP and Static IP)	The RC-1SPDT-A18 switch matrix can be controlled from any Windows <sup>®</sup> , Mac <sup>®</sup> , or Linux <sup>®</sup> computer, or even a mobile device with a network connection and Ethernet-TCP/IP (HTTP or Telnet protocols) support. Using a VPN would allow remote control from anywhere in the world.
USB HID (Human Interface Device)	User may also control the switch matrix via USB connection. Plug-and-Play, no driver required. Compatible with Windows® or Linux® operating systems using 32 and 64 bit architecture.
RF SPDT absorptive electromechanical switch	Wideband (DC to 18 GHz) with low insertion loss (0.2 dB typ.), very high isolation (85 dB typ.), and high power rating (10W cold switching).
24VDC operating voltage	The RC-1SPDT-A18 requires 24V / 330mA to power the RF switch, supplied from the power adaptor (included).
GUI Software CD, programming instructions, USB & Ethernet cables, and 24VDC power adaptor included	The RC-1SPDT-A18 comes ready to use out of the box with all software, accessories, and instructions needed for immediate operation included.

# Xtra Long Life 100 million cycles

# **USB/Ethernet RF Switch Matrix** RC-1SPDT-A18

# $50\Omega$ DC to 18 GHz

#### **Features**

- · Capable of 100 million cycles
- DC to 18 GHz SPDT absorptive fail-safe RF switch in breakbefore-make configuration
- · Electromechanical switching (Isolation 85 dB typ.)
- · High power handling, 10W
- USB HID or Ethernet-TCP/IP HTTP and Telnet) control
- · Easy installation and operation
- Supports a wide range of programming environments (See <u>AN-49-001</u> for details)<sup>1</sup>
- Mounting bracket (Optional)
- Protected by US Patents 5,272,458; 6,414,577; 6,650,210; 7,633,361 and 7,843,289





Case Style: LM1848

Installation CD

Model No.	Description	Price	Qty.
RC-1SPDT-A18	USB/Ethernet RF Switch	\$485.00 ea.	(1-9)
Included Accesso	ories		
AC/DC-24-3W1	AC/DC 24V Adapter (see Or	dering Information)	1
CBL-3W1-XX	AC Power Cord (see Ordering	g Information)	1
USB-CBL-AB-3+	2.7 ft USB cable		1
CBL-RJ45-MM-5+	5 ft. Ethernet cable		1
RFSW-CD	Installation CD		1


#### **RoHS Compliant**

See our web site for RoHS Compliance methodologies and qualifications

### **Applications**

- R&D
- · Automated Test equipment
- · Controlling RF signal paths

#### Mini-Circuits RF Switch Control Program for USB/Ethernet RF Switch Matrix

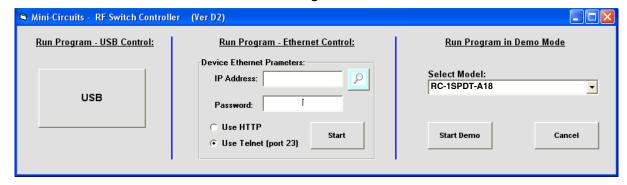

#### Steps to start RC-1SPDT-A18 GUI via USB

- Click on USB button.
- If more than one unit is connected select S/N from list and click OK.
- · Start working.

#### Steps to start RC-1SPDT-A18 GUI via Ethernet

- · Click on search icon.
- · Select unit from list of IP addresses and click select
- The selected IP will appear in the IP Address field.
- Select communication protocol (Telnet or HTTP)
- Click on Start and begin working.
- For Demo mode of any Switch Matrix model select the model name from the drop box and click 'Start Demo' (See <u>user guide</u> for details)
- For programming instructions of the switch matrix see programming guide and AN-49-001 on Mini-Circuits' website

<sup>1</sup> Windows is a registered trademarks of Microsoft Corporation in the United States and other countries. Linux is a registered trademark of Linus Torvalds. Mac is a registered trademark of Apple Corporation in the United States and other countries.
Neither Mini-Circuits nor the Mini-Circuits RC-1SPDT-A18 are affiliated with or endorsed by the owners of the above referenced trademarks.

Mini-Circuits and the Mini-Circuits logo are registered trademarks of Scientific Components Corporation.



## **Electrical Specifications**

Parameter	Port	Conditions	Min.	Тур.	Max.	Units	
Bata d Walland	24V <sub>DC</sub> IN	provided via external power adapter	23	24	25	.,	
Rated Voltage USB Port		_	-	5	_	V	
Power On Sequence: Connec	t the 24V power, follo	wed by the USB control and/or Ether	net cable befor	e turning on the	e Switch Matrix	· ·	
	24V <sub>DC</sub> IN	All switches in COM -> 2 position	-	245	330		
D		All switches in COM -> 1 position	_	75	120		
Rated Current		All switches in COM -> 2 position	-	10	20	mA mA	
	USB Port	All switches in COM -> 1 position	_	10	20		
Switching Time		-	-	25	_	ms	
		@ 100 mW (hot switching) <sup>3</sup>	10	-	_	million switching	
Life (per switch) <sup>2</sup>		@ 1 W (hot switching) <sup>3</sup>	_	3	_	cycles	
RF Power (cold switching) <sup>4</sup>			_	_	10		
RF Power (hot switching) <sup>4</sup>		-	_	_	1	W	
<del></del>		DC to 1 GHz	_	1.05	1.10		
DE VOMB		1 GHz to 8 GHz	_	1.20	1.30		
RF VSWR		8 GHz to 12 GHz	_	1.20	1.35	:1	
		12 GHz to 18 GHz	_	1.25	1.40		
		DC to 1 GHz	_	0.10	0.15		
RF Insertion Loss (per switch)		1 GHz to 8 GHz	_	0.15	0.30		
		8 GHz to 12 GHz	_	0.25	0.40	dB	
		12 GHz to 18 GHz	_	0.30	0.50		
		DC to 1 GHz	85	100	_		
		1 GHz to 8 GHz	75	90	_	10	
RF Isolation (per switch)		8 GHz to 12 GHz	70	80	_	dB	
		12 GHz to 18 GHz	60	66	_		

### **Minimum System Requirements**

Interface	USB HID or HTTP Get/Post or Telnet protocols
Host operating system - USB Control	Windowws 32/64 Bit operating system: Windows 98 <sup>®</sup> , Windows XP <sup>®</sup> , Windows Vista <sup>®</sup> , Windows 7 <sup>®</sup> , Windows 8, <sup>®</sup> Linux <sup>®</sup> support: 32/64 Bit operating system
Host operating system - Ethernet Control	Any Windows®, Mac®, or Linux® computer with a network port and Ethernet-TCP/IP (HTTP or Telnet protocols) support
Hardware	Pentium <sup>®</sup> II or better <sup>5</sup>

<sup>&</sup>lt;sup>5</sup> Pentium<sup>®</sup> is a registered trademark of Intel Corporation

## **Absolute Maximum Ratings**

Operating Temperature	0°C to 40°C
Storage Temperature	-15°C to 45°C
DC Voltage max.	26V
RF power (at COM port of any switch)	10W
RF power (at 1 and 2 of any switch)	1W


Permanent damage may occur if any of these limits are exceeded.

#### **Connections**


24V <sub>DC</sub> IN	(2.1 mm center positive DC Socket)
RF Switch A (1, COM, 2)	(SMA female)
USB	(USB type B receptacle)
Network (Ethernet/LAN)	(RJ45 socket)

<sup>2</sup> Capable of up to 100 million cycles with proper maintenance, contact Mini-Circuits
3 Exceeding these limits will result in reduced life.
4 Power handling is specified with RF applied to the COM port and output load connected to either 1 or 2 of the respective switch.


### **Block Diagram**

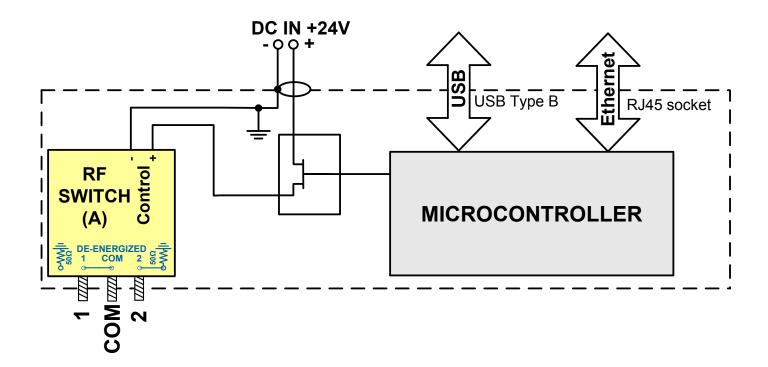

#### **Outline Drawing (LM1848)**

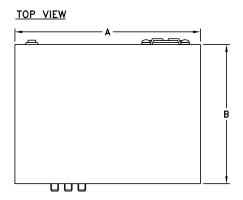


#### FRONT VIEW

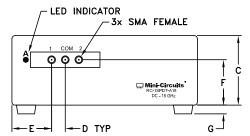


#### **BOTTOM VIEW**


Shown with Rubber feet removed and Brackets Installed.

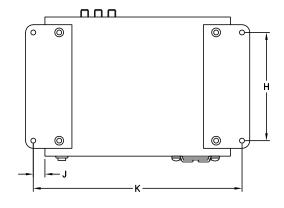

#### REAR VIEW

 

# BRACKET OPTION ONE SET OF 2 EACH.

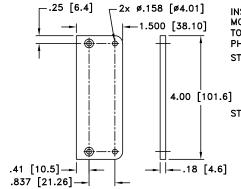

TOLERANCE: ±.005

INSTRUCTION FOR MOUNTING BRACKETS: TOOL REQUIRED:

PHILLIPS HEAD SCREW DRIVER

STEP 1: REMOVE RUBBER FEET
FROM THE BOTTOM
OF THE UNIT.
DO NOT DISCARD
THE FASTENERS.


STEP 2: MOUNT THE BRACKETS
WITH THE FASTENERS
REMOVED IN STEP 1,
USING THE COUNTERBORE HOLES IN THE
BRACKET.


## Outline Dimensions (inch mm)

В С D Ē F G Н Κ WT. GRAMS J 1.47 6.00 4.50 2.25 0.440 1.28 0.28 3.500 .375 6.75 875 152.4 114.3 57.2 11.18 32.5 37.3 7.1 88.9 9.52 171.4

## **Configuration A: SPDT switch**


- Power handling is specified with RF applied to the COM port and output load connected to either 1 or 2 of the respective switch.
  When connecting a coaxial semi flex cable, tighten connectors alternately using an 8in/lb torque wrench to insure proper contact at each end.

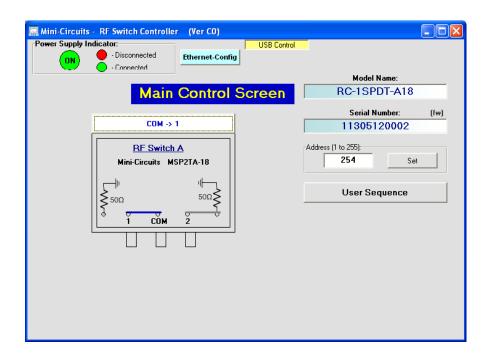

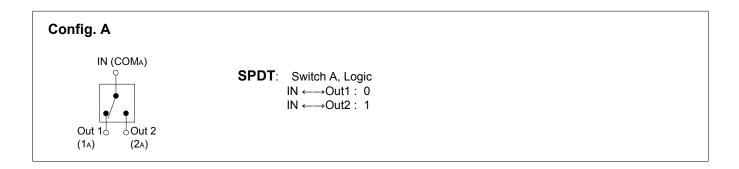

#### User Switching Sequence - for setting any configuration or sequence needed

- Power handling is specified with RF applied to the COM port and output load connected to either 1 or 2 of the respective switch.
- When connecting a coaxial semi flex cable, tighten connectors alternately using an 8in/lb torque wrench to insure proper contact at each end.

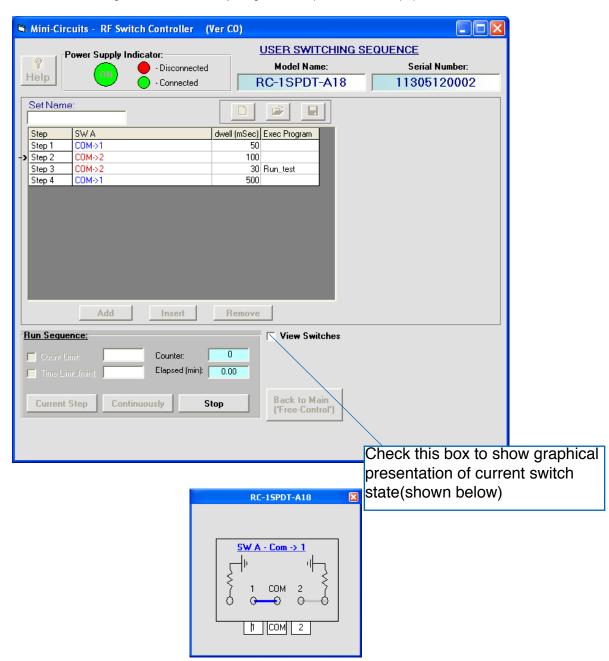

- For instructions on using the GUI See the user guide on Mini-Circuits' website
- $\bullet \ \, \text{For programming instructions of the switch matrix see the } \underline{\text{programming guide}} \ \text{and } \underline{\text{AN-49-001}} \ \text{on Mini-Circuits' website}$

#### Ordering, Pricing & Availability Information see our web site

Model	Description
RC-1SPDT-A18	USB/Ethernet RF SPDT Switch Matrix

Included Accessories	Part No.	Description
	AC/DC-24-3W1	AC/DC 24V <sub>DC</sub> Grounded Power Adaptor. Operating temperature: 0°C to +40°C, I <sub>Max</sub> =2.5A
	CBL-3W1-XX	AC Power Cord (Select one power cord from below with each Switch Matrix box)
	RFSW-CD	Software CD
337	USB-CBL-AB-3+	2.7 ft (0.8 m) USB Cable: USB type A(Male) to USB type B(Male)
	CBL-RJ45-MM-5+	5 ft (1.5 m) Ethernet cable: RJ45(Male) to RJ45(Male) Cat 5E cable

AC Power Cords <sup>6</sup>	Part No.	Description
A. C.	CBL-3W1-US	Power Cord for United States
-	CBL-3W1-EU	Power Cord for Europe
4	CBL-3W1-UK	Power Cord for United Kingdom
3	CBL-3W1-AU	Power Cord for Australia and China
9	CBL-3W1-IL	Power Cord for Israel

<sup>6.</sup> Power cords for other countries are also available, if you need a power cord for a country not listed in the table please contact apps@minicircuits.com or check http://www.minicircuits.com/contact/offices.html for regional offices e-mail and phone numbers.

Description
2.7 ft (0.8 m) USB Cable: USB type A(Male) to USB type B(Male)
6.8 ft (2.1 m) USB Cable: USB type A(Male) to USB type B(Male)
11 ft (3.4 m) USB Cable: USB type A(Male) to USB type B(Male)
5 ft (1.5 m) Ethernet cable: RJ45(Male) to RJ45(Male) Cat 5E cable
Bracket (One set of 2 each)

#### **Additional Notes**

- A. Performance and quality attributes and conditions not expressly stated in this specification document are intended to be excluded and do not form a part of this specification document.
- B. Electrical specifications and performance data contained in this specification document are based on Mini-Circuit's applicable established test performance criteria and measurement instructions.
- C. The parts covered by this specification document are subject to Mini-Circuits standard limited warranty and terms and conditions (collectively, "Standard Terms");
  Purchasers of this part are entitled to the rights and benefits contained therein. For a full statement of the Standard Terms and the exclusive rights and remedies thereunder, please visit Mini-Circuits' website at <a href="https://www.minicircuits.com/MCLStore/terms.jsp">www.minicircuits.com/MCLStore/terms.jsp</a>

