
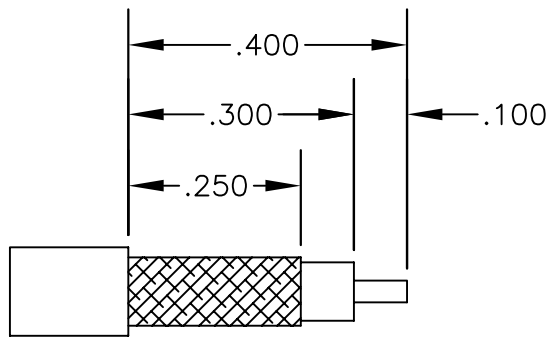


# **MATERIALS**

|                  |                          |
|------------------|--------------------------|
| <b>BODY</b>      | <b>BRASS GOLD PLATED</b> |
| <b>CONTACT</b>   | <b>GOLD PLATED</b>       |
| <b>INSULATOR</b> | <b>PTFE</b>              |
|                  |                          |

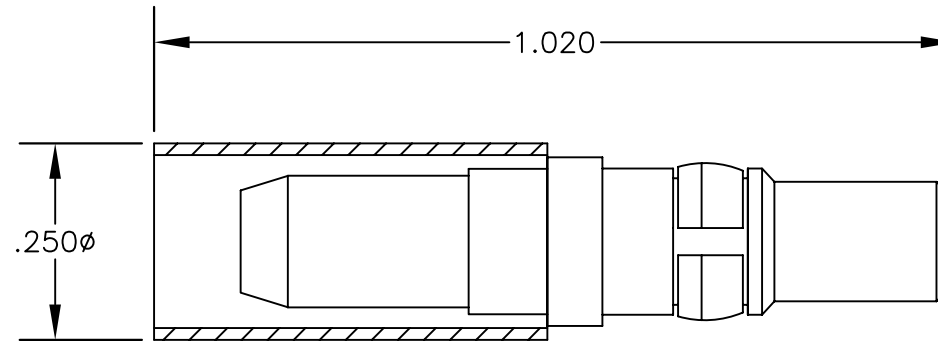

STRIPPING DIMENSIONS

## ASSEMBLY PROCEDURES

1. SLIDE FERRULE ONTO CABLE STRIP CABLE AS SHOWN & TIN CENTER CONDUCTOR.
2. INSERT DIELECTRIC AND CENTER CONDUCTOR INTO BODY. SOLDER CENTER CONDUCTOR THROUGH HOLE IN BODY. REMOVE EXCESS SOLDER. SLIDE FERRULE FORWARD & CRIMP.

## CRIMP SIZE REQUIRED

FERRULE: .213" HEX CRIMP TOOL



**PASTERNACK ENTERPRISES, INC.**

P.O BOX 16759, IRVINE, CA 92623  
PHONE (949) 261-1920 FAX (949) 261-7451

WEB ADDRESS: [www.pasternack.com](http://www.pasternack.com)  
E-MAIL ADDRESS: [sales@pasternack.com](mailto:sales@pasternack.com)

**COAXIAL & FIBER OPTICS**

DWG TITLE

**PE4842**

DES.

D SUBMINIATURE STRAIGHT PLUG CRIMP  
ATTACHMENT FOR RG55, RG142, RG223 &  
RG400

SIZE A

**FSCM NO. 53919**

CAD FILE 061402

SCALE N/A

127

## **NOTES:**

1. UNLESS OTHERWISE SPECIFIED ALL DIMENSIONS ARE NOMINAL.
2. ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE AT ANY TIME.