



MATERIALS

BODY	BRASS NICKEL PLATED
CONTACT	GOLD PLATED
INSULATOR	PTFE

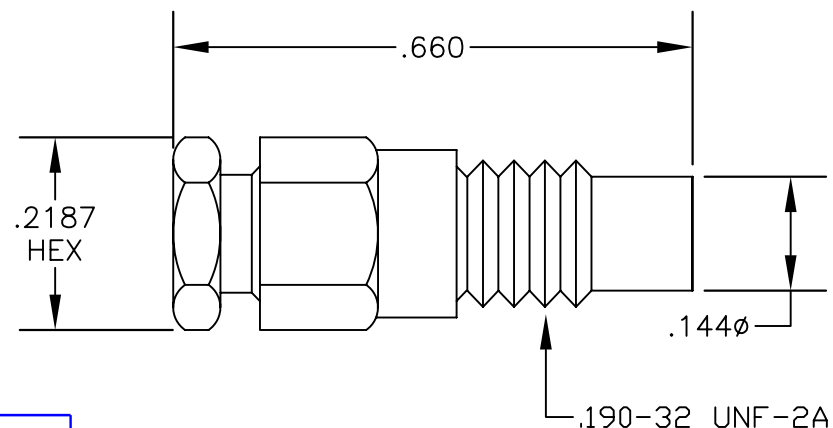

**COMPRESSION
WASHER**




NUT

INSULATOR




FERRULE

BODY



CONTACT

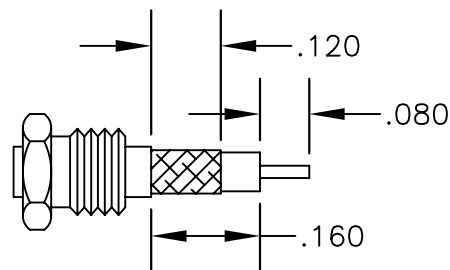

ASSEMBLY PROCEDURES

1. SLIDE CLAMP NUT OVER CABLE AND STRIP CABLE AS SHOWN.

2. SLIDE COMPRESSION WASHER ONTO CABLE IN THE ORIENTATION SHOWN UNTIL IT STOPS AGAINST CABLE JACKET. SPLAY CABLE BRAID AND SLIDE FERRULE UNDER BRAID.

3. PRESS FERRULE AGAINST COMPRESSION WASHER. TRIM EXCESS BRAID FLUSH WITH OUTER DIAMETER OF COMPRESSION WASHER AND FERRULE. ASSEMBLE INSULATOR OVER CABLE CENTER CONDUCTOR AND DIELECTRIC.

4. SOLDER CONTACT TO CENTER CONDUCTOR. INSERT CABLE ASSEMBLY INTO CONNECTOR BODY AND TIGHTEN.



PASTERNAK ENTERPRISES, INC.

P.O BOX 16759, IRVINE, CA 92623
PHONE (949) 261-1920 FAX (949) 261-7451

WEB ADDRESS: www.pasternack.com
E-MAIL ADDRESS: sales@pasternack.com

COAXIAL & FIBER OPTICS

DWG TITLE

PE4271

DES.

SMC JACK, CLAMP ATTACHMENT FOR RG178 & RG196

REV. A

FSCM NO. 53919

CAD FILE

070607

SCALE N/A

SIZE A

127

NOTES:

1. UNLESS OTHERWISE SPECIFIED ALL DIMENSIONS ARE NOMINAL.
2. ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE AT ANY TIME.