



Economy Vector Network Analyzers

MS46322A Series ShockLine™ Economy Vector Network Analyzers

Introduction

The MS46322A is part of the ShockLine™ family of Vector Network Analyzers from Anritsu. It is a low-cost series of 2U high, 2-port Economy Vector Network Analyzers. It is available in six frequency ranges: 1 MHz to 4/8/14/20/30/43.5 GHz, and is capable of s-parameter and time

The MS46322A is based on patented ShockLine™ VNA-on-chip technology, which simplifies the internal VNA architecture at high frequencies, reduces instrument cost, and enhances accuracy and measurement repeatability. The combination of low cost and good performance make ShockLine™ VNAs ideal candidates for testing RF and Microwave passive devices to 43.5 GHz.

The MS46322A series supports SCPI command programming and has software driver support for the most common programming environments. The MS46322A use industry standard LAN communications for robust remote control in test applications. ShockLine™ VNAs provide a powerful graphical user interface for manual testing of devices. The full-featured user interface is enabled by attaching a (user-supplied) touchscreen monitor, keyboard, and mouse.

This document provides detailed specifications for the MS46322A series Vector Network Analyzers (VNAs) and related options.

Instrument Models and Operating Frequencies

- MS46322A-004, 1 MHz to 4 GHz, 2-port
- MS46322A-010, 1 MHz to 8 GHz, 2-port
- MS46322A-014, 1 MHz to 14 GHz, 2-port
- MS46322A-020, 1 MHz to 20 GHz, 2-Port
- MS46322A-030, 1 MHz to 30 GHz, 2-Port
- MS46322A-040, 1 MHz to 43.5 GHz, 2-Port

Principal Option

• MS46322A-002, Time Domain



Table of Contents ShockLine™ MS46322A

Description	Page
Definitions	
System Dynamic Range	
Receiver Compression L	evels
Output Power Settings.	
Measurement Stability.	
•	Accuracy, and Stability
	Characteristics
• ,	ce for MS46322A-004 and MS46322A-010 (Manual Cal Kits) 4
•	ce for MS46322A-014 and MS46322A-020 (Manual Cal Kits) 5
•	ce for MS46322A-030 and MS46322A-040 (Manual Cal Kits) 6
•	ce for MS46322A-004 and MS46322A-010 (SmartCal™) 7
-	ce for MS46322A-040 (AutoCal)
-	ut Summary
	9
•	on Capabilities
	5
	rity Features
• • • • • • • • • • • • • • • • • • • •	
	tibility
•	
Ordering Information	
Definitions	All specifications and characteristics apply under the following conditions, unless otherwise stated:
Warm-Up Time	After 30 minutes of warm-up time, where the instrument is left in the ON state.
Temperature Range	Over the 25 °C \pm 5 °C temperature range.
Error-Corrected Specifications	Specifications are valid over 23 °C \pm 3 °C, with < 1 °C variation from calibration temperature. Error-corrected specifications are warranted and include guard-bands, unless otherwise stated.
Frequency Bands in Tables	When a frequency is listed in two rows of the same table, the specification for the common frequency is taken from the lower frequency band.
User Cables	Specifications do not include effects of any user cables attached to the instrument.
Discrete Spurious Responses	Specifications may exclude discrete spurious responses. All specifications apply with internal 10 MHz Crustal Oscillator Reference Signal
Internal Reference Signal Interpolation Mode	All specifications apply with internal 10 MHz Crystal Oscillator Reference Signal. All specifications are with Interpolation Mode Off.
Standard	Refers to instruments without Options.
Typical Performance	Typical performance indicates the measured performance of an average unit. It does not include guard-bands and is not covered by the product warranty. Typical specifications are shown in parenthesis, such as (-102 dB), or noted as Typical. The MS46322A is operational to 43.5 GHz. All specifications above 40 GHz are typical.
Characteristic Performance	Characteristic performance indicates a performance designed-in and verified during the design phase. It does include guard-bands and is not covered by the product warranty.
Recommended Calibration Cycle	12 months (Residual specifications also require calibration kit calibration cycle adherence.)

Specifications Subject to Change All specifications subject to change without notice.

System Dynamic Range

System dynamic range is calculated as the difference between High source power and the noise floor (RMS) at the specified reference plane at 10 Hz IF Bandwidth.

Frequency Range	Standard (dB)	Typical (dB) ^a
1 MHz ^b to 20 MHz	85	105
> 20 MHz to 8 GHz	100	115
> 8 GHz ^c to 43.5 GHz	100	110

a. Typical performance obtained by using optional isolation calibration.

Receiver Compression Levels

Performance is typical.

Frequency Range	Standard (dBm)
1 MHz to 43.5 GHz	+5 dBm

High Level Noise

Measured at 100 Hz IF bandwidth and at High power level, RMS. Performance is characteristic.

Frequency	Magnitude (dB)	Phase (deg)
1 MHz to < 20 MHz	0.03 (0.005, typical)	< 0.2 (< 0.035 typical)
20 MHz to 43.5 GHz	0.006 (0.001, typical)	< 0.1 (< 0.05 typical) ^a

a. Above 20 GHz, High Level Noise (phase only) is increased by a factor of 1.5.

Output Power Settings

Power Setting	Standard (dBm)
High (default)	-3 dBm, typical
Low	-20 dBm, typical

Measurement Stability

Ratio measurement, with ports shorted. Typical.

Frequency	Magnitude (dB/°C)	Phase (dB/°C)
10 MHz to 43.5 GHz	0.02	0.3

Frequency Resolution, Accuracy, and Stability

Resolution	Accuracy	Stability	Aging
1 Hz	± 1.0 ppm (at time of calibration)	± 1.0 ppm from -10 °C to +55 °C, typical	± 1.0 ppm/yr, typical

Uncorrected (Raw) Port Characteristics

User and System Correction Off. All specifications typical.

Frequency Range	equency Range Directivity (dB)	
1 MHz to 43.5 GHz	> 8 dB	> 8 dB

b. Decrease specification by 20 dB below 10 MHz.

c. Decrease specification by 5 dB between 8 GHz and 14 GHz.

VNA System Performance for MS46322A-004 and MS46322A-010 (Manual Cal Kits)


Error-Corrected Specifications

With 12-term SOLT Calibration using TOSLN50A-8 or TOSLNF50A-8 N type connector calibration kits.

Frequency Range	Directivity (dB)	Source Match (dB)	Load Match ^a (dB)	Reflection Tracking ^a (dB)	Transmission Tracking ^a (dB)
1 MHz to 6 GHz	≥ 42	≥ 33	≥ 42	±0.15	±0.06
> 6 GHz to 8 GHz	≥ 37	≥ 33	≥ 37	±0.15	±0.06

a. Typical performance.

Measurement Uncertainties

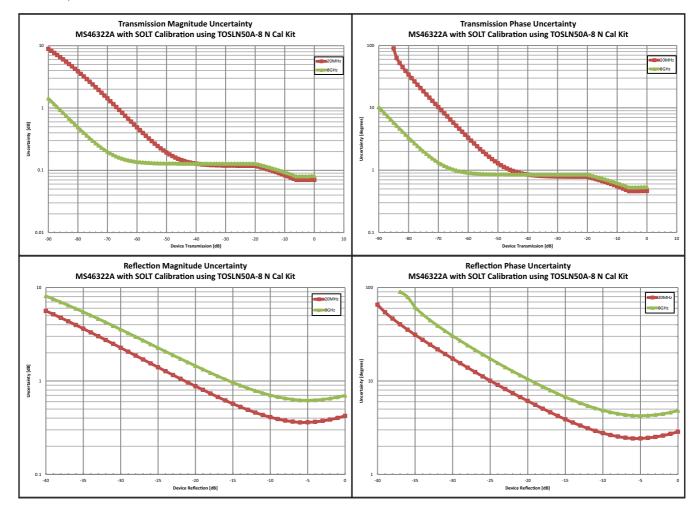

VNA System Performance for MS46322A-014 and MS46322A-020 (Manual Cal Kits)


Error-Corrected Specifications

With 12-term SOLT calibration using the TOSLK50A-20 or TOSLKF50A-20 K type connector calibration kits.

Frequency Range	Directivity (dB)	Source Match (dB)	Load Match ^a (dB)	Reflection Tracking ^a (dB)	Transmission Tracking ^a (dB)
1 MHz to 10 GHz	≥ 42	≥ 33	≥ 42	±0.15	±0.06
> 10 GHz to 20 GHz	≥ 36	≥ 26	≥ 36	±0.15	±0.05

a. Typical performance.

Measurement Uncertainties

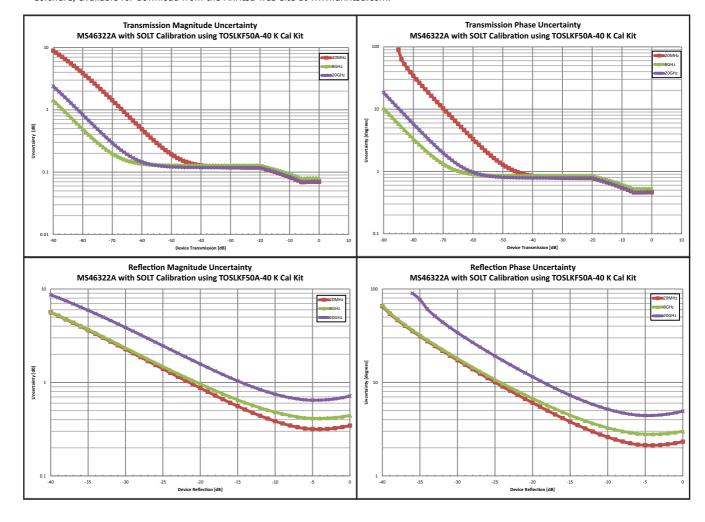

VNA System Performance for MS46322A-030 and MS46322A-040 (Manual Cal Kits)


Error-Corrected Specifications

With 12-term SOLT Calibration using TOSLK50A-40 or TOSLKF50A-40 K type connector calibration kits.

Frequency Range	Directivity (dB)	Source Match (dB)	Load Match ^a (dB)	Reflection Tracking ^a (dB)	Transmission Tracking ^a (dB)
1 MHz to 10 GHz	≥ 42	≥ 33	≥ 42	±0.15	±0.06
> 10 GHz to 20 GHz	≥ 36	≥ 26	≥ 36	±0.15	±0.05
> 20 GHz to 30 GHz	≥ 36	≥ 22	≥ 36	±0.10	±0.05
> 30 GHz to 43.5 GHz	≥ 30	≥ 20	≥ 30	±0.10	±0.05

a. Typical performance.

Measurement Uncertainties

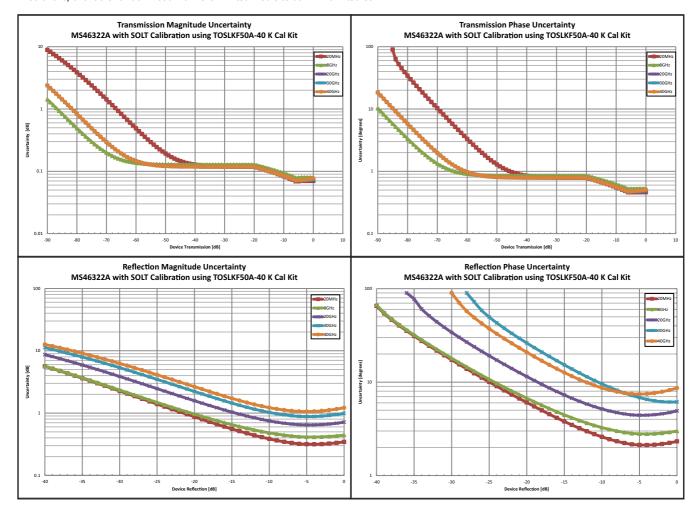

VNA System Performance for MS46322A-004 and MS46322A-010 (SmartCal™)


Error-Corrected Specifications using 8.5 GHz MN25208A SmartCal™

With 12-term calibration using the MN25208A SmartCal™ automatic calibration kit.

Frequency Range	Directivity (dB)	Source Match (dB)	Load Match ^a (dB)	Reflection Tracking ^a (dB)	Transmission Tracking ^a (dB)
1 MHz to < 3 GHz	≥ 42	≥ 33	≥ 42	±0.15	±0.06
3 GHz to 6 GHz	≥ 42	≥ 33	≥ 42	±0.15	±0.08
> 6 GHz to 8 GHz	≥ 37	≥ 33	≥ 37	±0.15	±0.08

a. Typical performance.

Measurement Uncertainties

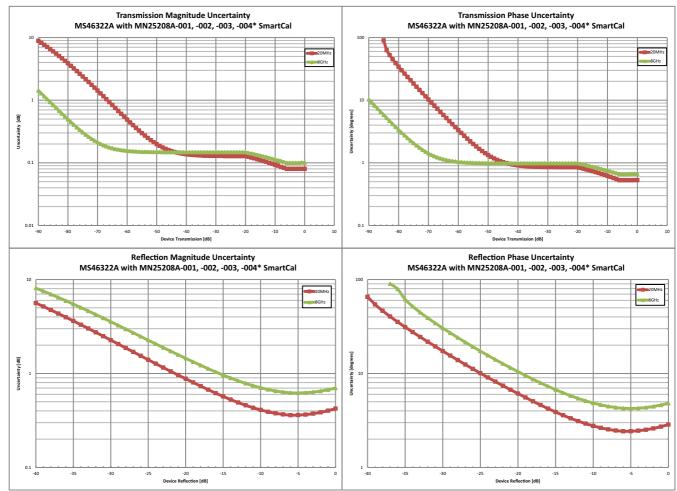

^{*} Specifications are not warranted. All values are typical.


VNA System Performance for MS46322A-040 (AutoCal)

Error-Corrected Specifications using 36585K AutoCal

With 12-term calibration using the 36585K automatic calibrator (AutoCal). Performance is typical.

Frequency Range	Directivity (dB)	Source Match (dB)	Load Match (dB)	Reflection Tracking (dB)	Transmission Tracking (dB)
1 MHz to < 10 GHz	≥ 54	≥ 49	≥ 42	±0.15	±0.06
10 GHz to < 20 GHz	≥ 45	≥ 49	≥ 36	±0.15	±0.05
20 GHz to < 30 GHz	≥ 45	≥ 45	≥ 36	±0.10	±0.05
30 GHz to 40 GHz	≥ 45	≥ 45	≥ 30	±0.10	±0.05

Measurement Uncertainties

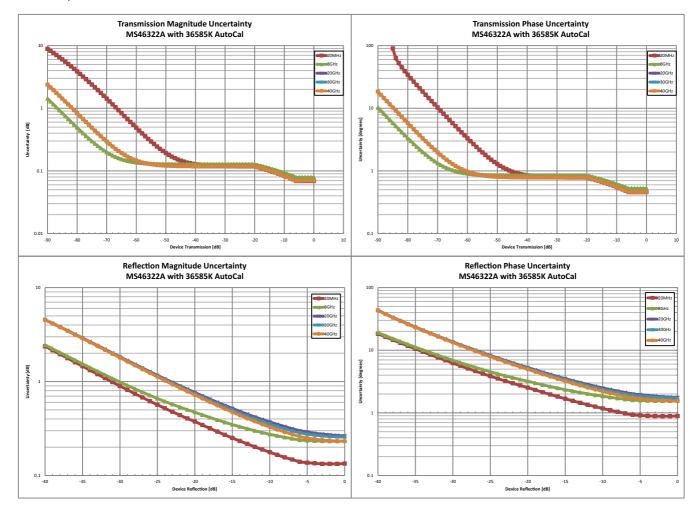

Measurement Throughput Summary

Measurement Speed

220 µs/point, typical. Per point single sweep time, including placing measurement data into memory. Average of narrow, mid, and wide frequency span sweeps. 300 kHz IFBW, 201 points, 2 port calibrated data measurement.

Data Transfer Time (ms)

Transferred complex S11 data, using "CALC:DATA:SDATA?" command. Typical performance data.a

Number of Points	51	201	401	1601
SCPI over LAN				
REAL 64	4	4	4	8
REAL 32	4	4	4	8
ASCII	14	34	60	209

a. Data transfer time varies depending on the PC and control software used with the VNA.

Standard Capabilities

Operating	Frea	uencies
Operacing	rieq	uencies

MS46322A-004 1 MHz to 4 GHz MS46322A-010 1 MHz to 8 GHz MS46322A-014 1 MHz to 14 GHz MS46322A-020 1 MHz to 20 GHz MS46322A-030 1 MHz to 30 GHz MS46322A-040 1 MHz to 43.5 GHz

Measurement Parameters

2-Port Measurements

 S_{11} , S_{21} , S_{22} , S_{12} , and any user-defined combination of a_1 , a_2 , b_1 , b_2 , 1.

Domains Frequency Domain, and Time (Distance) Domain

Sweeps

Frequency Sweep Types Linear, Log, or Segmented

Display Graphs

Single Rectilinear Graph Types
Dual Rectilinear Graph Types

Log Magnitude, Phase, Group Delay, Linear Magnitude, Real, Imaginary, SWR, and Impedance

Log Mag and Phase, Linear Mag and Phase, Real and Imaginary

Circular Graph Types Smith Chart (Impedance), Polar

Measurements Data Points

Maximum Data Points 2 to 16,001 points

Limit Lines

Limit Lines

Single or segmented. 2 limit lines per trace. 50 segments per trace.

Single Limit Readouts

Uses interpolation to determine the intersection frequency.

Test Limits Both single and segmented limits can be used for PASS/FAIL testing.

Averaging

Point-by-Point

Point-by-point (default), maximum number of averages = 4096

Sweep-by-Sweep Sweep-by-sweep, maximum number of averages = 4096

IF Bandwidth

10, 20, 50, 70, 100, 200, 300, 500, 700 Hz

1, 2, 3, 5, 7, 10, 20, 30, 50, 70, 100, 200, 300 kHz

Reference Plane

Line Length or Time Delay

The reference planes of a calibration or other normalization can be changed by entering a line length or time

delay.

Dielectric Constants Dispersion Modeling Dielectric constants may be entered for different media so the length entry can be physically meaningful.

g Dispersion modeling is used in the cases of microstrip and waveguide to take into account frequency dependent

Attenuations Attenuations and constant phase offsets can be entered to better describe any reference plane distortions.

CW Mode

hase velocities.

De-embedding For more complete reference plane manipulation, the full de-embedding system can also be used.

Measurement Frequency Range

Frequency Range Change

Frequency range of the measurement can be narrowed within the calibration range without recalibration.

CW mode permits single frequency measurements also without recalibration.

Interpolation Not Activated

If interpolation is not activated, the subset frequency range is forced to use calibration frequency points.

Interpolation Activated If interpolation is activated, any frequency range that is a subset of the calibration frequency range can be used,

but there may be some added interpolation error.

Group Delay

Defined as the frequency span over which the phase change is computed at a given frequency point. Group Delay Aperture

> Aperture The aperture can be changed without recalibration.

Minimum Aperture The minimum aperture is the frequency range divided by the number of points in calibration and can be

increased to 20 % of the frequency range.

Group Delay Range < 180° of phase change within the aperture

Channels, Display, and Traces

Channels and Traces 16 channels, each with up to 16 traces

Display Colors Unlimited colors for data traces, memory, text, markers, graticules, and limit lines

Trace Memory and Math A separate memory for each trace can be used to store measurement data for later display or subtraction,

addition, multiplication or division with current measurement data. The trace data can be saved and recalled.

Intra-trace Math Any two traces within a channel can be combined (via addition, subtraction, multiplication, or division) and

displayed on another trace.

Scale Resolution

Minimum per division, varies with graph type.

Log Magnitude 0.001 dB Linear Magnitude 10 μU 0.01° Phase Group Delay 0.1 ps 0.0001 ps Time Distance 0.1 μm

SWR 10 μU

Power 0.01 dB

Markers

Markers 12 markers + 1 reference marker

Marker Coupling Coupled or decoupled

Marker Data Data displayed in graph area or in table form Reference Marker Additional marker per trace for reference Marker Statistics Mean, maximum, minimum, standard deviation

Per trace or over a marker region

Marker Search and Tracking Search and/or track for minimum, maximum, peak, or target value

Other

Filter Parameters

Display bandwidth (user-selectable loss value), corner and center frequencies, loss, Q, and shape factors.

Calibration and Correction Capabilities

Calibration Methods

Short-Open-Load-Through (SOLT)
Offset-Short-Offset-Short-Load-Through (SSLT) Triple-Offset-Short-Through (SSST)

SmartCal™

AutoCal

Thru Update available

Correction Models

2-Port (Forward, Reverse, or both directions)

1-Port (S₁₁, S₂₂, or both)

Transmission Frequency Response (Forward, Reverse, or both directions)

Reflection Frequency Response (S₁₁, S₂₂, or both)

Coefficients for Calibration Standards

Use the Anritsu calibration kit USB memory device to load kit coefficients and characterization files.

Enter coefficients into user-defined locations.

Use complex load models.

Interpolation

Allows interpolation between calibration frequency points.

Adapter Removal Calibration

Characterizes and "removes" an adapter that is used during calibration that will not be used for subsequent device measurements; for accurate measurement of non-insertable devices.

Selectable as Coaxial, other non-dispersive (e.g., for coplanar waveguide), Waveguide, or Microstrip

Dispersion Compensation Embedding/De-embedding

The MS46322A is equipped with an Embedding/De-embedding system.

De-embedding

De-embedding is generally used for removal of test fixture contributions, modeled networks, and other networks

described by S-parameters (s2p files) from measurements.

Multiple Networks

Embedding

Similarly, the Embedding function can be used to simulate matching circuits for optimizing amplifier designs or simply adding effects of a known structure to a measurement. Multiple networks can be embedded/de-embedded and changing the port and network orientations is handled

easily.

Extraction Utility

An extraction utility is part of this package that allows easier computation of de-embedding files based on

additional calibration steps and measurements.

Impedance Conversion

Allows entry of different reference impedances (complex values) for different ports

Optional Capabilities

Time Domain Measurements

Option 002

Displays all S-parameters and overlays with Frequency Domain, Low-pass Mode with added harmonics frequency list flexibility, Band-pass Mode, Phasor Impulse Mode, Windowing, Gating (pass-band or reject-band), and Frequency with Time Gate.

Remote Operability

Communication Type	Data Format	Performance	Description	
Via LAN	Using VXI-11 Protocol	Gigabit Data Transfer Speed	Use SCPI commands	
Drivers for LAN	IVI-C drivers are available for download from the Anritsu website. The IVI-C package supports National Instruments LabVIEW and LabWindows, C#, .NET, MATLAB, and Python34 programming environments.			
Triggering	Start Trigger	Software and Digital Edge		
	Input Range	+3.3 V logic level (+5 V tolerant)		
	Minimum Trigger Width	50 ns		
	Trigger Delay	6 μs, typical		

Front Panel Connections



MS46322A Front Panel

Test Ports 1 and 2

MS46322A-004 N(f) MS46322A-010 N(f)

MS46322A-014 Ruggedized K(m)
MS46322A-020 Ruggedized K(m)
MS46322A-030 Ruggedized K(m)
MS46322A-040 Ruggedized K(m)

Damage Input Levels +23 dBm maximum, ±50 VDC maximum

USB Ports

Two type A USB 2.0 Ports for peripherals such as keyboard, mouse, flash drive, hardware key, and similar

devices.

Chassis Grounding Port Banana(f)

Rear Panel Connections



MS46322A Series Rear Panel

AC Power Input		AC Input connector, with On/Off switch, and fuses 350 VA maximum, 90 to 264 VAC, 47 to 63 Hz (power factor controlled)		
USB and LAN				
	USB Ports	Two type A USB 2.0 Ports and two type A USB 3.0 for peripherals such as keyboard, mouse, memory stick, US		

monitor, and hardware key.

LAN Port Gigabit Ethernet

HDMI Port Video output, touchscreen compatible

10 MHz In Signal presence is auto-sensing (better than 10 ppm frequency accuracy is recommended).

Connector Type BNC(f)

Signal +0 dBm, typical; 50 Ω , nominal

External Trigger Input

Connector Type BNC(f)

 $\begin{array}{ll} \mbox{Voltage Input} & 0 \mbox{ to } 3.3 \mbox{ V input } (5 \mbox{ V tolerant}) \\ \mbox{Impedance} & \mbox{High impedance} \mbox{ (> } 100 \mbox{ k}\Omega) \\ \mbox{Pulse Width} & 50 \mbox{ ns minimum input pulse width} \\ \end{array}$

Trigger Delay 6 µs typical

CPU, Memory, and Security Features

Intel Core™ i5

Storage Serial-ATA (SATA) Solid State Drive (SSD), for OS, Programs, and Data. (> 30 GB)

Security Features

Virus Protection, Best Practices If the VNA is attached to a network, best practices recommend installing anti-virus software.

Mechanical

Dimensions Dimensions listed are for the instrument body without rack mount option attached.

> $H \times W \times D$ 108 mm x 484 mm x 590 mm

Weight < 11 kg (< 25 lb), typical weight for a fully-loaded MS46322A VNA

Environmental

Operating Specification Conforms to MIL-PRF-28800F (class 3)

> Temperature Range 0 °C to +50 °C

5 % to 95 % at +40 °C, Non-condensing Relative Humidity

Non-Operating

-40 °C to +75 °C Temperature Range

Relative Humidity 0 % to 90 % at +65 °C, Non-condensing

Electromagnetic Compatibility

EMI Conforms to and meets the requirements of:

2004/108/EC EMC Directive 2006/95/EC Low Voltage Directive

> Emissions EN55011:2009+A1:2010 Group 1 Class A EN 61000-4-2-2009, 4 kV CD, 8 kV AD EN 61000-4-3:2006+A2:2010, 3 V/m

EN 61000-4-4:2004, 0.5 kV S-L, 1 kV P-L EN 61000-4-5:2006, 0.5 kV S-L, 1 kV L-E EN 61000-4-6:2009, 3 V

EN 61000-4-11:2004, 100% @ 20 ms

Safety

European Union CE Mark

> EN 61010-1:2010 Standard:

Warranty

Instrument and Built-In Options 3 years from the date of shipment (standard warranty)

> Calibration Kits Typically 1 year from the date of shipment Test Port Cables Typically 1 year from the date of shipment

Warranty Options Additional warranty available

Ordering Information

Instrument Models	
Base Model	MS46322A, 2-Port ShockLine™ Economy VNA
Required Option (Select one frequency option only)	MS46322A-004, 1 MHz to 4 GHz, type N(f) ports MS46322A-010, 1 MHz to 8 GHz, type N(f) ports MS46322A-014, 1 MHz to 14 GHz, type Ruggedized K(m) ports (compatible with 3.5 mm and SMA connectors) MS46322A-020, 1 MHz to 20 GHz, type Ruggedized K(m) ports (compatible with 3.5 mm and SMA connectors) MS46322A-030, 1 MHz to 30 GHz, type Ruggedized K(m) ports (compatible with 3.5 mm and SMA connectors) MS46322A-040, 1 MHz to 43.5 GHz, type Ruggedized K(m) ports (compatible with 3.5 mm and SMA connectors)
Included Accessories	Each VNA comes with a set of included accessories.
User Documentation	The user documentation USB device includes Adobe Acrobat PDF files for the ShockLine Operation Manual, User Interface Reference Manual, Programming Manual, Calibration and Measurement Guide, and the Technical Data Sheet.
Power	Power Cord
Main VNA Options	
MS46322A-001	Rack Mount, adds handles and removes feet for shelf-mounting into a 19 inch universal rack
MS46322A-002	Time Domain with Time Gating
Calibration Options	
MS46322A-098	Standard Calibration, ISO 17025 compliant, without data
MS46322A-099	Premium Calibration, ISO 17025 compliant, with data
Precision Automatic Calibrato	or Modules
MN25208A	2-port USB SmartCal Module, 300 kHz to 8.5 GHz, (available with various connector options)
36585K-2M	K Precision AutoCal Module, 70 kHz to 40 GHz, K(m) to K(m)
36585K-2F	K Precision AutoCal Module, 70 kHz to 40 GHz, K(f) to K(f)
36585K-2MF	K Precision AutoCal Module, 70 kHz to 40 GHz, K(m) to K(f)
Mechanical Calibration Kits	
3650	SMA/3.5 mm Calibration Kit
3650A	SMA/3.5 mm Calibration Kit, Without Sliding Loads
3650A-1	SMA/3.5 mm Calibration Kit, With Sliding Loads
3652A	K Calibration Kit, Without Sliding Loads
3652A-1	K Calibration Kit, With Sliding Loads
3653A	N Calibration Kit, Without Sliding Loads
OSLN50A-8	Precision N Male Open/Short/Load Mechanical Calibration Tee
OSLNF50A-8	Precision N Female Open/Short/Load Mechanical Calibration Tee
TOSLN50A-8	Precision N Male Through/Open/Short/Load Mechanical Calibration Tee
TOSLNF50A-8	Precision N Female Through/Open/Short/Load Mechanical Calibration Tee
OSLN50A-18 OSLNF50A-18	Precision N Male Open/Short/Load Mechanical Calibration Tee
TOSLN50A-18	Precision N Female Open/Short/Load Mechanical Calibration Tee
TOSLN50A-18 TOSLNF50A-18	Precision N Male Through/Open/Short/Load Mechanical Calibration Tee Precision N Female Through/Open/Short/Load Mechanical Calibration Tee
TOSLK50A-20	Precision K Male Through/Open/Short/Load Mechanical Calibration Tee
TOSLK50A-20	Precision K Female Through/Open/Short/Load Mechanical Calibration Tee
TOSERI SUA-20	recision R remaie initiogny openy snoty Load Pietrianical Calibration fee

Verification Kits

3663-2 N Verification Kit 3668-2 K Verification Kit

TOSLK50A-40 Precision K Male Through/Open/Short/Load Mechanical Calibration Tee
TOSLKF50A-40 Precision K Female Through/Open/Short/Load Mechanical Calibration Tee

RF Cables and Adapters RF Cables, Semi-Rigid, N(m) to N(m), 1 each, 0.01 to 18 GHz, 50 Ω , 15 cm (5.9 in) N120-6 NS120MF-6 RF Cables, Semi-Rigid, N(f) to N(f), 1 each, 0.01 to 18 GHz, 50 Ω , 15 cm (5.9 in) 1091-26-R SMA(m) to N(m), DC to 18 GHz, 50 Ω 1091-27-R SMA(f) to N(m), DC to 18 GHz, 50 Ω 1091-80-R SMA(m) to N(f), DC to 18 GHz, 50 Ω 1091-81-R SMA(f) to N(f), DC to 18 GHz, 50 Ω 71693-R Ruggedized adapter, K(f) to N(f), DC to 18 GHz, 50 ohm 34NN50A Precision Adapter, N(m) to N(m), DC to 18 GHz, 50 $\Omega\,$ 34NFNF50 Precision Adapter, N(f) to N(f), DC to 18 GHz, 50 Ω 34NK50 Precision Adapter, N(m) to K(m), DC to 18 GHz, 50 Ω 34NKF50 Precision Adapter, N(m) to K(f), DC to 18 GHz, 50 Ω 34NFK50 Precision Adapter, N(f) to K(m), DC to 18 GHz, 50 Ω 34NFKF50 Precision Adapter, N(f) to K(f), DC to 18 GHz, 50 Ω K220B Precision Adapter, DC to 40 GHz, K(m) to K(m), 50 Ω K222B Precision Adapter, DC to 40 GHz, K(f) to K(f), 50 Ω K224B Precision Adapter, DC to 40 GHz, K(m) to K(f), 50 Ω Test Port Cables, Flexible, Ruggedized, Phase Stable 14RKFKF50-0.6 0.6 m (24"), DC to 40 GHz, Ruggedized K(f) to K(f), 50 Ω 14RKFKF50-1.0 1.0 m (39"), DC to 40 GHz, Ruggedized K(f) to K(f), 50 Ω 14RKFK50-0.6 0.6 m (24"), DC to 40 GHz, Ruggedized K(f) to K(m), 50 Ω 14RKFK50-1.0 1.0 m (39"), DC to 40 GHz, Ruggedized K(f) to K(m), 50 Ω 14KFKF50-0.6 0.6 m (24"), DC to 40 GHz, K(f) to K(f), 50 Ω 14KFKF50-1.0 1.0 m (39"), DC to 40 GHz, K(f) to K(f), 50 Ω 14KFK50-0.6 0.6 m (24"), DC to 40 GHz, K(f) to K(m), 50 Ω 14KFK50-1.0 1.0 m (39"), DC to 40 GHz, K(f) to K(m), 50 Ω 15NNF50-1.0B Test Port Cable, Flexible, Phase Stable, N(f) to N(m), 1.0 m 15NNF50-1.5B Test Port Cable, Flexible, Phase Stable, N(f) to N(m), 1.5 m 15NN50-1.0B Test Port Cable, Flexible, Phase Stable, N(m) to N(m), 1.0 m 15LL50-1.0A Test Port Cable, Armored, Phase Stable, DC to 20 GHz, 3.5 mm(m) to 3.5 mm(m), 1.0 m, 50 Ω 15LLF50-1.0A Test Port Cable, Armored, Phase Stable, DC to 20 GHz, 3.5 mm(m) to 3.5 mm(f), 1.0 m, 50 Ω 15KK50-1.0A Test Port Cable, Armored, Phase Stable, DC to 20 GHz, K(m) to K(m), 1.0 m, 50 Ω 15KKF50-1.0A Test Port Cable, Armored, Phase Stable, DC to 20 GHz, K(m) to K(f), 1.0 m, 50 Ω SC8267 Cable, 40 GHz, K(m) to K(f), 1 m (36"), 50 Ω Phase-Stable 18 GHz and 40 GHz Semi-Rigid Cables (Armored) 3670K50-1 0.3 m (12"), DC to 40 GHz, K(f) to K(m), 50 Ω 3670K50-2 0.6 m (24"), DC to 40 GHz, K(f) to K(m), 50 Ω 3670N50-1 0.3 m (12"), DC to 18 GHz, N(f) to N(m), 50 Ω 3670NN50-1 0.3 m (12"), DC to 18 GHz, N(m) to N(m), 50 Ω 3670N50-2 0.6 m (24"), DC to 18 GHz, N(f) to N(m), 50Ω 3670NN50-2 0.6 m (24"), DC to 18 GHz, N(m) to N(m), 50 Ω **Transit Case** 760-269 ShockLine™ VNA Transit Case, Hard plastic with wheels Tools 01-200 Calibrated Torque End Wrench, GPC-7 and Type N 01-201 Torque End Wrench, 5/16 in, 0.9 N·m (8 lbf·in) For tightening male devices, for SMA, 3.5 mm, 2.4 mm, K, and V connectors 01-203 Torque End Wrench, 13/16 in, 0.9 N.m (8 lbf.in) For tightening ruggedized SMA, 2.4 mm, K and V test port connectors 01-204 End Wrench, 5/16 in, Universal, Circular, Open-ended, For SMA, 3.5 mm, 2.4 mm, K and V connectors Documentation Soft copies of the manuals as Adobe Acrobat PDF files are included on the User Documentation USB memory User Documentation device provided with the instrument. The Maintenance Manual is available from Anritsu Customer Service. For more information, please contact ShockLineVNA.support@Anritsu.com. 10410-00335 MS46322A Series VNA Operation Manual (OM) 10410-00336 MS46322A Series VNA Calibration and Measurement Guide (MG) 10410-00337 MS46322A Series VNA User Interface Reference Manual (UIRM) 10410-00338 MS46322A Series VNA Programming Manual (PM), for IEEE 488.2 and SCPI Commands



Annitsu envision: ensure

United States

Anritsu Company

1155 Fast Collins Blvd Suite 100 Richardson, TX 75081, U.S.A. Toll Free: 1-800-267-4878 Phone: +1-972-644-1777 Fax: +1-972-671-1877

• Canada

Anritsu Electronics Ltd.

700 Silver Seven Road, Suite 120 Kanata, Ontario K2V 1C3, Canada Phone: +1-613-591-2003 Fax: +1-613-591-1006

• Brazil

Anritsu Electrônica Ltda.

Praça Amadeu Amaral, 27 - 1 Andar 01327-010 Bela Vista, São Paulo, Brazil Phone: +55-11-3283-2511 Fax: +55-11-3288-6940

Mexico

Anritsu Company, S.A. de C.V. Av. Ejército Nacional No. 579 Piso 9, Col. Granada 11520 México, D.F., México Phone: +52-55-1101-2370 Fax: +52-55-5254-3147

• United Kingdom

Anritsu EMEA Ltd.

200 Capability Green Luton, Bedfordshire LU1 3LU United Kingdom Phone: +44-1582-433280 Fax: +44-1582-731303

• France

Anritsu S.A.

12 Avenue du Québec Bâtiment Iris 1-Silic 612 91140 Villebon-sur-Yvette, France Phone: +33-1-60-92-15-50 Fax: +33-1-64-46-10-65

Germany

Anritsu GmbH

Nemetschek Haus, Konrad-Zuse-Platz 1 81829 München, Germany Phone: +49-89-442308-0 Fax: +49-89-442308-55

Italy

Anritsu S.r.l.

Via Flio Vittorini 129 00144 Roma, Italy Phone: +39-06-509-9711 Fax: +39-06-502-2425

Sweden

Anritsu AB

Kistagången 20B 164 40 KISTA, Sweden Phone: +46-8-534-707-00 Fax: +46-8-534-707-30

Finland

Anritsu AB

Teknobulevardi 3-5 FI-01530 Vantaa, Finland Phone: +358-20-741-8100 Fax: +358-20-741-8111

Denmark

Anritsu A/S

Kay Fiskers Plads 9 2300 Copenhagen S, Denmark Phone: +45-7211-2200 Fax: +45-7211-2210

Russia

Anritsu EMEA Ltd.

Representation Office in Russia

Tverskaya str. 16/2, bld. 1, 7th floor Moscow, 125009, Russia Phone: +7-495-363-1694 Fax: +7-495-935-8962

• Spain

Anritsu EMEA Ltd.

Representation Office in Spain

Edificio Cuzco IV, Po. de la Castellana, 141, Pta. 8 28046, Madrid, Spain Phone: +34-915-726-761 Fax: +34-915-726-621

• United Arab Emirates

Anritsu EMEA Ltd.

Dubai Liaison Office

P O Box 500413 - Dubai Internet City Al Thuraya Building, Tower 1, Suite 701, 7th Floor Dubai, United Arab Emirates Phone: +971-4-3670352 Fax: +971-4-3688460

India

Anritsu India Private Limited

2nd & 3rd Floor, #837/1, Binnamangla 1st Stage Indiranagar, 100ft Road, Bangalore - 560038, India Phone: +91-80-4058-1300 Fax: +91-80-4058-1301

• Singapore

Anritsu Pte. Ltd.

11 Chang Charn Road, #04-01, Shriro House Singapore 159640 Phone: +65-6282-2400 Fax: +65-6282-2533

• P.R. China (Shanghai)

Anritsu (China) Co., Ltd.

27th Floor, Tower A New Caohejing International Business Center No. 391 Gui Ping Road Shanghai, Xu Hui Di District Shanghai 200233, P.R. China Phone: +86-21-6237-0898 Fax: +86-21-6237-0899

• P.R. China (Hong Kong)

Anritsu Company Ltd.
Unit 1006-7, 10/F., Greenfield Tower Concordia Plaza No. 1 Science Museum Road, Tsim Sha Tsui East Kowloon, Hong Kong, P. R. China Phone: +852-2301-4980 Fax: +852-2301-3545

• Japan

Anritsu Corporation

8-5, Tamura-cho, Atsugi-shi Kanagawa, 243-0016 Japan Phone: +81-46-296-1221 Fax: +81-46-296-1238

Korea

Anritsu Corporation, Ltd.

5FL, 235 Pangyoyeok-ro, Bundang-gu Seongnam-si Gyeonggi-do, 463-400 Korea Phone: +82-31-696-7750 Fax: +82-31-696-7751

Australia

Anritsu Pty Ltd.

Unit 21/270 Ferntree Gully Road Notting Hill, Victoria, 3168, Australia Phone: +61-3-9558-8177 Fax: +61-3-9558-8255

Anritsu Company Inc. 7F, No. 316, Sec. 1, Neihu Rd, Taipei 114, Taiwan Phone: +886-2-8751-1816

Fax: +886-2-8751-1817


List Revision Date: 20150420















MS46322A ShockLine™ TDS